




TECH TIP: Notching for Commercial Dividers

Before assembling cabinets using the 2-1/4" Retainer (Part #2045), Dual Frame (Part #2065), or 2" Retro Frame (Part #2112), provisions can be made to the extrusion to allow for future use of dividers or to allow for existing divider configurations to be easily changed.

1. After the frame has been assembled, notch the frame as shown below. The notch will need to be at least 5" long. Both sides of the frame will need to be notched.



2. After the frame has been notched, a new Divider can now be added or an existing Divider can be reconfigured as needed.

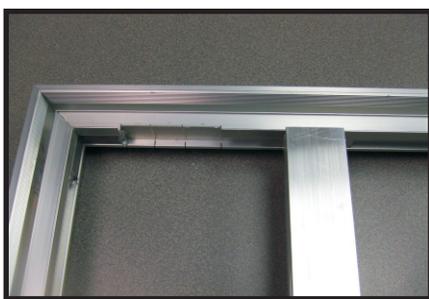

Notching the frame before assembly allows for the ability to change out Dividers or add new Dividers while in the field. Without notching the frame, the cabinet would need to be taken apart in order to make any changes to the Divider configurations.

This 5 minute step in your shop can save you TIME in the field!

PLEASE NOTE: This procedure can also be done to an existing cabinet.